



THINGS YOU WILL NEED TO GET STARTED



INSERT LED WIRES THROUGH HOLES ON FLAG MAST AS SHOWN (NOTE: BE CERTAIN TO RUN WIRES THROUGH THE INTERNAL HOLES WITHIN THE MAST AS REQUIRED TO GET TO BASE ACCESS HOLE)

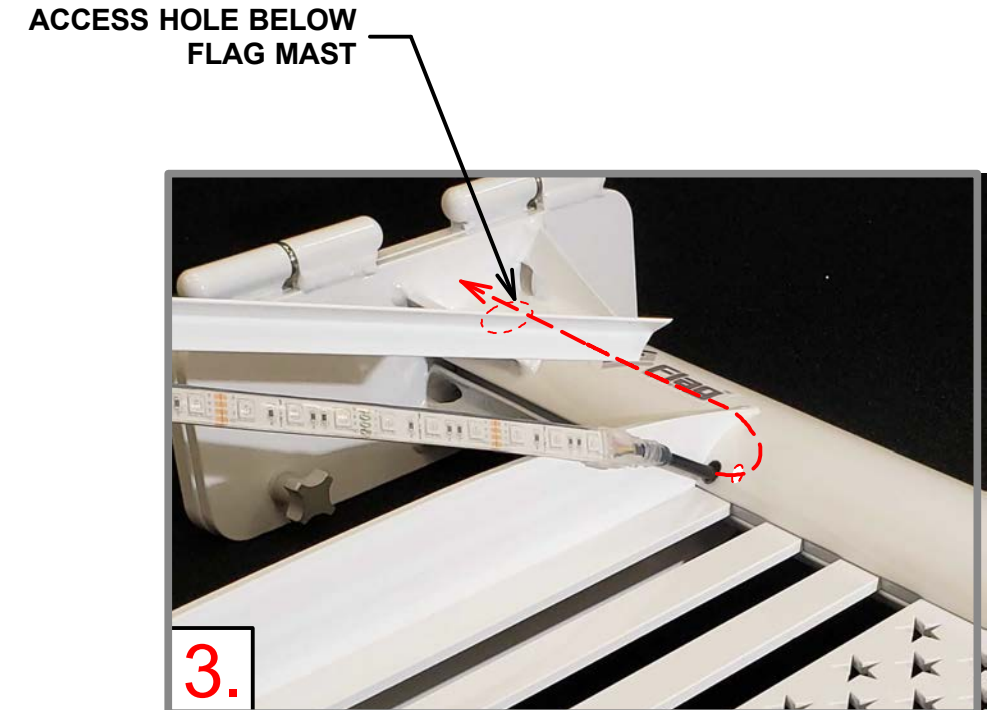


RUN WIRES DOWN THROUGH FLAG MAST AND THROUGH ACCESS HOLE IN BASE AS NEEDED

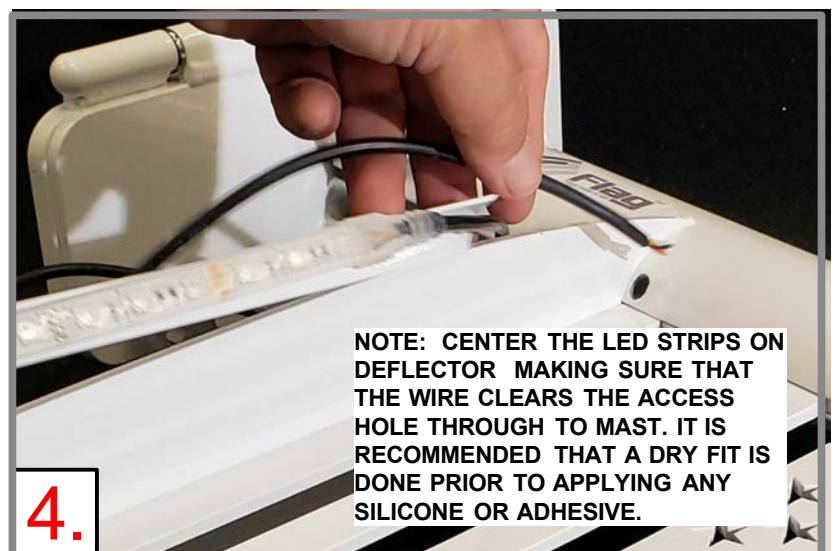

SILICONE LED LIGHT STRIP TO 1/2"X1/2" ALUMINUM DEFLECTOR STIP FIRST - BEFORE ATTACHING TO FLAG



ONCE LED STRIPS ARE ATTACHED TO DEFLECTOR, THEN SILICONE THE ALUMINUM DEFLECTOR SHIELD TO THE FLAG AS SHOWN. CAULK ACCESS HOLES ONCE POSITIONED CORRECTLY TO PREVENT WATER INTRUSION.

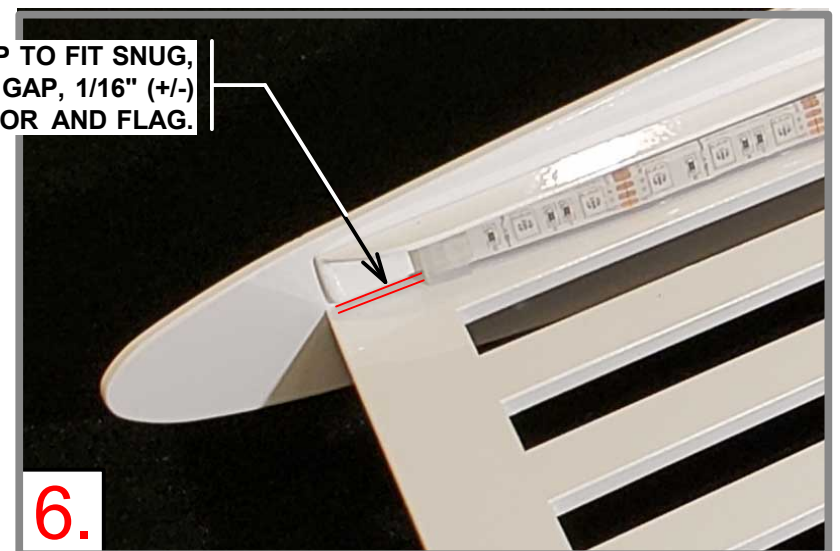

TALE END OF LIGHT STRIP AND DEFLECTOR. NOTE: THERE SHOULD BE A SLIGHT GAP BETWEEN ALUMINUM DEFLECTOR AND FLAG.

INSTALLATION GUIDELINES FOR LED LIGHT STRIPS



U.S. Patent No. 10, 783,812
 U.S. Patent No. 10, 783,813
 Foreign Patent Pending

CONFIDENTIAL AND PRIVILEGED: This document and any attachments may contain information that is privileged, confidential, patent, trademark, and copyright protected. The information herein is protected from disclosure to anyone other than its intended recipient(s). Any dissemination or use of this document or its contents, including any attachments by persons other than the intended recipient(s) is strictly prohibited.