



Multiple Zone RGB/RGBW RF Remote Controller

Model No.: 32513

3-Key/1, 2, 4, 8 Zone/Touch color wheel/Wireless remote 30m distance/AAAx2 battery/Magnet stuck fix



32513

4 Zone RGB/RGBW

CE RoHS EMC LVD RED

Features


- Apply to RGB or RGBW LED controller.
- Ultra sensitive color adjustment touch wheel.
- Independent dimming function of each R, G, B, W channel to achieve millions of colors.
- Each remote can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.

Technical Parameters

Input and Output	RF12.4GHz	Safety and EMC	EN301.489,EN 62479
Output signal	3VDC(AAAX2)	EMC standard (EMC)	EN60950
Working voltage	< 5mA	Safety standard(IVD)	EN300 328
Working current	< 10µA	Radio Equipment(RED)	CE,EMC,IVD,RED
Standby current	1 year	Certification	
Standby time	30m(Barrier-free space)	Warranty	5 years
Remote distance		Warranty	
Environment		Weight	
Operation temperature	Ta:-30°C ~ +55°C	Net weight	0.078kg
Case temperature (Max.)	Tc:+85°C	Gross weight	0.111kg
IP rating	IP20		



Mechanical Structure and Installation

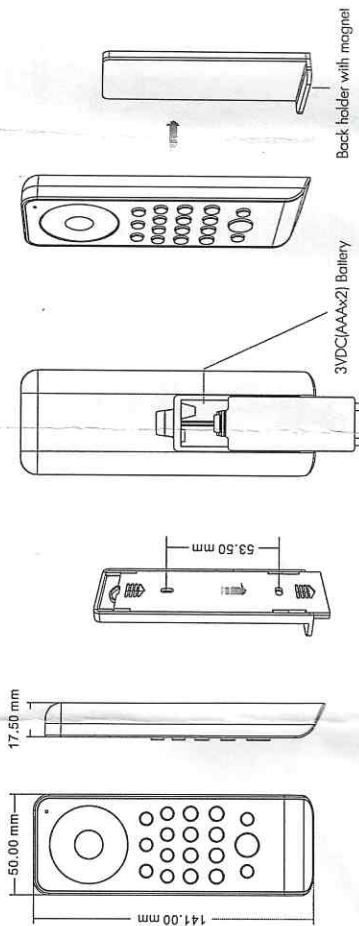

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with pasteur.

Operation

- When turn on light, the indicator display blue. when turn off light, the indicator display red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (if the light is off), the indicator display red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:
Short press match key, immediately press on/off key (single zone remote) or zone key (multiple zone remote) of the remote.
The LED indicator fast flash a few times means match is successful.

Delete:
Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:
Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 3 times on the remote. The light blinks 3 times means match is successful.

Delete:
Switch off the power, then switch on power again, immediately short press on/off key (single zone remote) or zone key (multiple zone remote) 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.